

Pump Model	Product	Pump Model	Product	Pump Model	Product
RG 5200 F3	Fuel Pump	RG 9080 H2	Fuel Pump	RG 9570 K4/M	Fuel Pump
RG 5200 F5	Fuel Pump	RG 9080 J1	Fuel Pump	RG 9570 L	Fuel Pump
RG 5530 N	Pump vane type	RG 9080 J1/M	Fuel Pump	RG 9570 M	Fuel Pump
RG 5530 V	Pump	RG 9080 J2	Fuel Pump	RG 9570 M1	Fuel Pump
RG 6100 E	Oil Pump	RG 9080 J-2/M	Fuel Pump	RG 9570 M1/M	Fuel Pump
RG 6100 E1	Oil Pump	RG 9080 J3	Fuel Pump	RG 9570 P	Fuel Pump
RG 6100 H	Oil Pump	RG 9080 J-3/M	Fuel Pump	RG 9570 P1/M	Fuel Pump
RG 6100 K	Oil Pump	RG 9080 J4	Fuel Pump	RG 9570 R	Fuel Pump
RG 6100 L	Oil Pump	RG 9080 J4A	Fuel Pump	RG 9570 R1	Fuel Pump
RG 6100 L1	Oil Pump	RG 9080 J4A/M	Fuel Pump	RG 9570 R1/M	Fuel Pump
RG 7600 A	Fuel Pump	RG 9080 J6A	Fuel Pump	RG 9590 D	Compressor
RG 7790 -2	Fuel Pump	RG 9080 J6A/M	Fuel Pump	RG 9590	Compressor
RG 7790 A2	Fuel Pump	RG 9080 J-7/M	Fuel Pump	RG 9680 A	Pump
RG 7790 A2N	Fuel Pump	RG 9080 J7A	Fuel Pump	RG 9680	Pump
RG 7790 D3	Fuel Pump	RG 9080 J7A/M	Fuel Pump	RG 9790 -3A1	Fuel Pump
RG 7790 G3	Fuel Pump	RG 9080 J8A	Fuel Pump	RG 9790 -3B	Fuel Boost Pump
RG 9065 E	Compressor	RG 9080 J8A/M	Fuel Pump	RG 9790 -3C	Fuel Boost Pump
RG 9065	Compressor	RG 9080 M-1/M	Fuel Pump	RG 9790 A	Fuel Pump
RG 9080 -2	Fuel Pump	RG 9080 M-2/M	Fuel Pump	RG 9790 B	Fuel Pump
RG 9080 -2/M	Fuel Pump	RG 9080	Fuel Pump	RR 10040 -1	Desiccator
RG 9080 B-2/M	Fuel Pump	RG 9570 D	Fuel Pump	RR 10040 A	Desiccator
RG 9080 C	Fuel Pump	RG 9570 E1	Fuel Pump	RR 10040 A1	Desiccator
RG 9080 D	Fuel Pump	RG 9570 E2	Fuel Pump	RR 10040 C	Desiccator
RG 9080 F1	Fuel Pump	RG 9570 F2	Fuel Pump	RR 10040 D	Desiccator
RG 9080 F-1/M	Fuel Pump	RG 9570 J	Fuel Pump	RR 10040 E	Desiccator
RG 9080 F2	Fuel Pump	RG 9570 J1	Fuel Pump	RR 10040 H	Desiccator
RG 9080 F-2/M	Fuel Pump	RG 9570 K1	Fuel Pump	RG 10060	Desiccator
RG 9080 G1	Fuel Pump	RG 9570 K1/M	Fuel Pump	RG 10180 B	Hydraulic Pump
RG 9080 G-1/M	Fuel Pump	RG 9570 K2	Fuel Pump	RG 10180 E	Hydraulic Pump
RG 9080 G2	Fuel Pump	RG 9570 K2/M	Fuel Pump	RG 10180	Lubrication Pump
RG 9080 G-2/M	Fuel Pump	RG 9570 K3	Fuel Pump	RG 10270 A	Lube & Scavenge Pump
RG 9080 G4	Fuel Pump	RG 9570 K3/M	Fuel Pump	RG 10270 A1	Lube & Scavenge Pump
RG 9080 H1	Fuel Pump	RG 9570 K4	Fuel Pump	RD 10770 B1	Pump
RR 11100 L	Fuel Boost Pump	RR 12020 E	Fuel Boost Pump	RG 12670 D	Fuel Boost Pump
RG 11100 L1	Fuel Boost Pump	RR 12040 F	Fuel Boost Pump	RG 12670 E	Fuel Boost Pump

Pump Model	Product	Pump Model	Product	Pump Model	Product
RG 11100	Fuel Boost Pump	RR 12040 G	Fuel Boost Pump	RR 12670 F	Fuel Boost Pump
RG 11260 T	Fuel Boost Pump	RR 12040 H	Fuel Boost Pump	RR 12670 K	Fuel Boost Pump
RG 11260 T2	Fuel Boost Pump	RR 12040	Fuel Boost Pump	RR 12670 L	Fuel Boost Pump
RG 11260	Fuel Boost Pump	RR 12150 D	Fuel Boost Pump	RR 12670 M	Fuel Boost Pump
RR 11460 A	Fuel Boost Pump	RG 12200 B	Fuel Boost Pump	RR 12670 R	Fuel Boost Pump
RR 11460 B	Fuel Boost Pump	RG 12200 C	Fuel Transfer Pump	RG 12670	Fuel Boost Pump
RR 11460	Fuel Boost Pump	RG 12220 A	Fuel Boost Pump	RG 12680	Centrifugal Pump
RG 11510 C	Fuel Boost Pump	RG 12240 -2	Fuel Boost Pump	RR 12690	Centrifugal Pump
RG 11510 D1	Fuel Boost Pump	RG 12240 -1	Fuel Boost Pump	RR 12720 A	Fuel Boost Pump
RR 11610 C1	Water Injection Pump	RG 12240 D	Fuel Boost Pump	RR 12720 B	Fuel Boost Pump
RR 11640 -3	Fuel Boost Pump	RG 12240 D1	Fuel Boost Pump	RR 12720	Fuel Boost Pump
RR 11640 -1	Fuel Boost Pump	RG 12240 D2	Fuel Boost Pump	RR 12730	Fuel Boost Pump
RR 11640 A	Fuel Boost Pump	RG 12240 E	Fuel Boost Pump	RR 12830 A	Fuel Boost Pump
RR 11640 A1	Fuel Boost Pump	RG 12240 F	Fuel Boost Pump	RR 12860 A	Fuel Boost Pump
RR 11640 A3	Fuel Boost Pump	RG 12240 L	Fuel Boost Pump	RR 12860	Fuel Boost Pump
RR 11640 C	Fuel Boost Pump	RG 12240	Fuel Boost Pump	RG 15150 A1	Fuel Pump
RR 11640 D	Fuel Boost Pump	RG 12270	Fuel Boost Pump	RG 15150 E	Fuel Pump
RR 11640 D1	Fuel Boost Pump	RG 12400 D	Fuel Boost Pump	RG 15150 G	Fuel Pump
RR 11640 D-2	Fuel Boost Pump	RG 12400 E	Fuel Boost Pump	RG 15150 G2	Fuel Pump
RR 11640 D4	Fuel Boost Pump	RG 12400 F	Fuel Boost Pump	RG 15150 G3	Fuel Pump
RR 11640	Fuel Boost Pump	RG 12400 G	Fuel Boost Pump	RG 15150 G4	Fuel Pump
RR 11840 B	Fuel Boost Pump	RG 12400	Fuel Boost Pump	RG 15150 G5	Fuel Pump
RR 11840	Fuel Boost Pump	RG 12470	Fuel Boost Pump	RG 15150 H	Fuel Pump
RG 11920 -2	Fuel Boost Pump	RR 12500 A	Fuel Boost Pump	RG 15150 L	Fuel Pump
RG 11920 -1	Fuel Boost Pump	RR 12500 B	Fuel Boost Pump	RG 15150 L2	Fuel Pump
RG 11920 A	Fuel Boost Pump	RR 12500 E	Fuel Boost Pump	RG 15150 L4	Fuel Pump
RG 11920 A1	Fuel Boost Pump	RR 12550 A	Fuel Boost Starting Pump	RG 15150 M	Fuel Pump
RG 11920	Fuel Boost Pump	RR 12551 A	Fuel Pump	RG 15150 P	Fuel Pump
RR 11970 -2	Fuel Boost Pump	RR 12559 A	Fuel Pump	RG 15150 V	Fuel Pump
RR 12000 C	Fuel Boost Pump	RR 12580 A	Fuel Boost Pump	RG 15150 V2	Fuel Pump
RR 12020 B	Fuel Boost Pump	RR 12580	Fuel Boost Pump	RG 15150 W	Fuel Pump
RG 15150 W2	Fuel Pump	RD 16145 B	Pump Assy	RG 17020 A1	Fuel Pump
RG 15155 E	Fuel Pump	RR 16300 A	Lube Pump	RG 17020 B1	Fuel Pump
RG 15155 E3	Fuel Pump	RR 16300 B	Lube Pump	RG 17030 -1	Fuel Pump
RG 15155 E4	Fuel Pump	RR 16300 C	Lube Pump	RG 17050 A	Coolant Pump

Pump Model	Product	Pump Model	Product	Pump Model	Product
RG 15270 C	Lube & Scavenge Pump	RR 16300 D	Lube Pump	RG 17050	Coolant Pump
RG 15270 E	Lube & Scavenge Pump	RR 16500 A12	Lube & Scavenge Pump	RG 17230 -9	Auxilliary Fuel Pump
RG 15270 F1	Lube & Scavenge Pump	RR 16500 A18	Lube & Scavenge Pump	RG 17350 D	Lube & Scavenge Pump
RR 15290 C	Lube & Scavenge Pump	RR 16500 A19	Lube & Scavenge Pump	RG 17350	Lube & Scavenge Pump
RR 15290 F	Lube & Scavenge Pump	RR 16500 A23	Lube & Scavenge Pump	RG 17400 B	Coolant Pump
RR 15290 H1	Lube & Scavenge Pump	RR 16500 A24	Lube & Scavenge Pump	RD 17430	Lube Pump
RG 15980 A	Fuel Pump	RR 16500 A25	Lube & Scavenge Pump	RG 17670 A	Lube & Scavenge Pump
RG 15980 B1	Fuel Pump	RR 16500 A26	Lube & Scavenge Pump	RR 17680 D	Lube & Scavenge Pump
RG 15980 D	Fuel Pump	RR 16500 A3	Lube & Scavenge Pump	RG 17700 B1	Lube & Scavenge Pump
RG 15980 E	Fuel Pump	RR 16500 A31	Lube & Scavenge Pump	RR 17700 D	Lube & Scavenge Pump
RG 15980 H	Fuel Pump	RR 16500 A32	Lube & Scavenge Pump	RR 17700 E	Lube & Scavenge Pump
RG 15980 H	Fuel Pump	RR 16500 A33	Lube & Scavenge Pump	RG 17740 -5	Fuel Pump
RG 15980 H1	Fuel Pump	RR 16500 A4	Lube & Scavenge Pump	RG 17740 -3	Fuel Pump
RG 15980 L	Fuel Pump	RR 16500 A9	Lube & Scavenge Pump	RG 17740 -1	Fuel Pump
RG 15980 L1	Fuel Pump	RG 16540 B	Fuel Pump	RR 17780 A1	Lube & Scavenge Pump
RG 15980 L1/M	Fuel Pump	RG 16540	Fuel Pump	RR 17780 B	Lube & Scavenge Pump
RG 15980 L2	Fuel Pump	RG 16550 A	Fuel Pump	RR 17780 C	Lube & Scavenge Pump
RG 15980 P1	Fuel Pump	RG 16700 C	Fuel Pump	RR 17780 G	Lube & Scavenge Pump
RG 15980 R	Fuel Pump	RG 16700 F1	Fuel Pump	RR 17790 A	Hand Lube Pump
RG 15980 R1	Fuel Pump	RG 16700 F2	Fuel Pump	RR 17800 C	Lube & Scavenge Pump
RG 15980 S	Fuel Pump	RG 16700 F2-2	Fuel Pump	RR 17800	Lube & Scavenge Pump
RG 15980 S1	Fuel Pump	RG 16700 J	Fuel Pump	RG 17840 A	Lube Pump
RG 15980	Fuel Pump	RG 16700 L	Fuel Pump	RG 17840	Lube Pump
RG 16020 A	Lube & Scavenge Pump	RG 16705 -17	Pump rotary gear	RG 17850 A	Lube Pump
RG 16020 D	Lube & Scavenge Pump	RG 16705 -5	Pump rotary gear	RG 17850	Lube Pump
RG 16020 F1	Lube & Scavenge Pump	RG 16710 A	Lube & Scavenge Pump	RR 17880 A	Lube Pump
RR 16020 H1	Lube & Scavenge Pump	RR 16730 A	Lube & Scavenge Pump	RR 17880 A1	Lube Pump
RG 16020	Lube & Scavenge Pump	RR 16730 D	Lube & Scavenge Pump	RR 17880 A2	Lube Pump
RG 16140	Fuel Transfer Pump	RR 16730 F	Lube & Scavenge Pump	RR 17920	Lube & Scavenge Pump
RG 17980 /M	Fuel Pump	RR 24050 A	Hydraulic Pump & Reservoir	RR 34120 D	Hydraulic Hand Pump
RG 17980 A	Fuel Pump	RR 24050 B	Hydraulic Pump & Reservoir	RR 34150 G	Lube & Scavenge Pump
RG 17980 A/M	Fuel Pump	RR 24050 C	Hydraulic Pump & Reservoir	RR 34150 K	Lube & Scavenge Pump
RG 17980 D	Fuel Pump	RR 24050	Hydraulic Pump & Reservoir	RR 34150 L	Lube & Scavenge Pump
RG 17980 D/M	Fuel Pump	RG 24080 A	Lube Pump	RG 34720 A	Fuel Boost Pump
RG 17980 E	Fuel Pump	RG 24080	Lube Pump	RG 34720 C	Fuel Pump

Pump Model	Product	Pump Model	Product	Pump Model	Product
RG 17980 E/M	Fuel Pump	RR 24090 B	Lube & Scavenge Pump	RG 34720 D	Fuel Pump
RG 17980 G	Fuel Pump	RG 24150	Fuel Pump	RG 34720 F	Fuel Pump
RG 17980 J	Fuel Pump	RG 24250	Gear-Type Fuel Pump	RG 34720 G	Fuel Pump
RG 17980 J/M	Fuel Pump	RR 24310	Lube & Scavenge Pump	RR 35230 B	Lube & Scavenge Pump
RG 17980 K	Fuel Pump	RG 24320 C	Windshield Washer Pump	RR 35230 C	Lube & Scavenge Pump
RG 17980 K/M	Fuel Pump	RR 24350 C	APU Fuel Pump	RR 35230 D	Lube & Scavenge Pump
RG 17980 N	Fuel Pump	RR 24360 A	Fuel Scavenge Pump	RR 35230 E	Lube & Scavenge Pump
RG 17980 N/M	Fuel Pump	RR 24360	Fuel Scavenge Pump	RR 35230 F	Lube & Scavenge Pump
RG 17980 P	Fuel Pump	RR 24640 B	Pump rotary	RR 35230 G	Lube & Scavenge Pump
RG 17980 P/M	Fuel Pump	RG 24660 A	Receiver pump assy	RR 35230 H	Lube & Scavenge Pump
RG 17980 R	Fuel Pump	RG 24660	Receiver pump assy	RR 35230	Lube & Scavenge Pump
RG 17980 R/M	Fuel Pump	RR 24670	Pump vane type	RR 35250	Scavenge Pump
RG 17980 S	Fuel Pump	RR 24680 A	Pump rotary	RR 35340 B	Lube & Scavenge Pump
RG 17980 U	Fuel Pump	RR 24680	Pump rotaru	RR 35340 D	Lube & Scavenge Pump
RG 17980 U/M	Fuel Pump	RG 25010	Pump rotary gear	RR 35340 F	Lube & Scavenge Pump
RG 17980	Fuel Pump	RR 30060 C	Pump rotary - power driven	RR 35420 C	Coolant Pump
RG 18960	Vacuum Pump	RR 30060 D	Pump rotary - power driven	RR 35420	Coolant Pump
RR 20080	Coolant Pump	RR 30140	Gear-Type Fuel Pump	RG 35540 A	Vane Pump
RR 20100 B	Coolant Pump	RR 30560 B	Fuel Pump	RG 35540 C	Vane Pump
RR 20100 C	Coolant Pump	RG 34000 A	Lube Pump	RG 35600 D	Lube pump
RR 20100 D	Coolant Pump	RG 34000 B	Lube Pump	RR 35600 E	Lube pump
RG 20122 -3	Pump rotary	RG 34000 D	Lube Pump	RR 35600 F	Lube pump
RG 20122 -2	Pump rotary	RR 34100 A	Lube Pump	RR 35600 G	Lube pump
RG 20170	Coolant Pump	RR 34100 B	Lube Pump	RR 35600	Lube Pump
RG 24010 A	Fuel Injector Prime Pump	RR 34120 A	Hand Pump	RR 35690 A	Lube Pump
RG 24010	Fuel Pump	RR 34120 B	Hydraulic Hand Pump	RR 35690 B	Lube Pump
RG 24040	Lube & Scavenge Pump	RR 34120 C	Hydraulic Hand Pump	RR 35690 E	Lube Pump
RG 35880 B	Coolant Pump	RR 36900 -4	Lube & Scavenge Pump	RR 37350 A-1	Fuel pump
RG 35880	Coolant Pump	RR 36900 -3	Lube & Scavenge Pump	RR 37350 A-2	Fuel pump
RR 35990 A	Lube Metering Pump	RR 36900 -2	Lube & Scavenge Pump	RR 37390	Scavenge Pump
RR 36090 C	Fuel Pump	RR 36900 -1	Lube & Scavenge Pump	RR 37400	Vane Type Scavenge Pump
RR 36110 A	Fuel Pump	RR 36920	Lube & Scavenge Pump	RR 37540	Lube & Scavenge Pump
RR 36110	Fuel Pump	RR 36970 A	Lube & Scavenge Pump	RR 37640 A	Lube & Scavenge Pump
RR 36130 B	PUMP, VANE, PAD	RR 37000 E	Lube & Scavenge Pump	RR 37640	Lube & Scavenge Pump
RR 36130 D	Lube & Scavenge Pump	RR 37000 F	Lube & Scavenge Pump	LR 37730 A	Lube Pump

Pump Model	Product	Pump Model	Product	Pump Model	Product
RR 36130	Lube & Scavenge Pump	RG 37060 A	Fuel Pump	LR 37730 B	Lube Pump
RR 36150 D	Pump rotary	RG 37060	Fuel Pump	LR 37730 C	Lube Pump
RR 36150 E	Pump rotary	RR 37080 B	Lube & Scavenge Pump	RR 37730	Lube Pump
RR 36150 J	Pump rotary	RR 37080 D	Lube & Scavenge Pump	RR 37790 A	Lube & Scavenge Pump
RR 36150 K	Pump rotary	RR 37080 E	Lube & Scavenge Pump	RR 37790 B	Lube & Scavenge Pump
RR 36150 L	Pump rotary	RR 37080 F	Lube & Scavenge Pump	RR 37790 C	Lube & Scavenge Pump
RR 36260	Fuel Pump	RR 37080 G	Lube & Scavenge Pump	RR 37790	Lube & Scavenge Pump
RR 36340 D	Lube Pump	RR 37080 H	Lube & Scavenge Pump	RR 37830	Lube & Scavenge Pump
RR 36340 E	Lube Pump	RR 37100 A	Lube & Scavenge Pump	RR 37850	Lube & Scavenge Pump
RR 36340	Lube Pump	RR 37100 B	Lube & Scavenge Pump	LR 37860 -1	Pump rotary
RR 36400 A	Coolant Pump	RR 37100 D	Lube & Scavenge Pump	LR 37860	Pump rotary
RR 36400	Coolant Pump	RR 37100	Lube & Scavenge Pump	LR 37870 F	Lube & Scavenge Pump
RR 36440 B	Lube & Scavenge Pump	RR 37110 C	PUMP, VANE, PAD	LR 37890 B	Lube & Scavenge Pump
RG 36590 B	Fuel pump	RR 37110 D	Lube & Scavenge Pump	RR 37890	Lube & Scavenge Pump
RG 36590 C	Fuel pump	RR 37110 F	Lube & Scavenge Pump	LR 37940 B	Lube & Scavenge Pump
RR 36680 B	Fuel Prime	RR 37170 A	Lube & Scavenge Pump	LR 37940 C	Lube & Scavenge Pump
RR 36680 C	Fuel Prime	RR 37170 B	Lube & Scavenge Pump	LR 37940 D	Lube & Scavenge Pump
RR 36800 C	Lube & Scavenge Pump	RR 37170 B2	Lube & Scavenge Pump	LR 37940 DA	Lube & Scavenge Pump
RR 36800 F	Lube & Scavenge Pump	RR 37170 C	Lube & Scavenge Pump	LR 37940 DB	Lube & Scavenge Pump
RR 36800 G	Lube & Scavenge Pump	RR 37170 D	Lube & Scavenge Pump	LR 37940 DC	Lube & Scavenge Pump
RR 36800 J	Lube & Scavenge Pump	RR 37170 DB	Lube & Scavenge Pump	LR 37940 DD	Lube & Scavenge Pump
RR 36890 A	Lube Pump	RR 37180 A	Lube Pump	LR 37940 F	Lube & Scavenge Pump
RR 36890 B	Lube Pump	RR 37180 B	Lube Pump	LR 37940 FA	Lube & Scavenge Pump
RR 36890	Lube Pump	RR 37220	Pump vane	LR 37940 FB	Lube & Scavenge Pump
RR 36900 -6	Lube & Scavenge Pump	RR 37290 B	Pump vane	LR 37940 FC	Lube & Scavenge Pump
LR 37940 FD	Lube & Scavenge Pump	RG 45010 C	Transfer Ejector Pump	LR 47050 D	Lube & Scavenge Pump
LR 37940 FE	Lube & Scavenge Pump	RG 45010 D	Transfer Ejector Pump	LR 47060 A	Lube & Scavenge Pump
LR 37940 FF	Lube & Scavenge Pump	RG 45010 D	Transfer Ejector Pump	LR 47060	Lube & Scavenge Pump
LR 37940 FG	Lube & Scavenge Pump	LR 45010 E	Transfer Ejector Pump	LR 47080 A	Lube & Scavenge Pump
LR 37940 G	Lube & Scavenge Pump	LR 45010 F	Fuel Transfer Jet Pump	LR 47080 B	Lube & Scavenge Pump
LR 37940 H	Lube & Scavenge Pump	RG 45020 A	Transfer Ejector Pump	LR 47080	Lube & Scavenge Pump
LR 37940 J	Lube & Scavenge Pump	RG 45020 C	Transfer Ejector Pump	LR 47090 A	Lube & Scavenge Pump
LR 37950 A	Lube & Scavenge Pump	LR 45020 D	Transfer Ejector Pump	LR 47090 B	Lube & Scavenge Pump
LR 37960 C	Lube & Scavenge Pump	RG 45090 A	Ejector Boost Pump	LR 47090	Lube & Scavenge Pump
LR 37960 D	Lube & Scavenge Pump	RG 45180	High Pressure Fuel Ejector	LR 47110	Lube & Scavenge Pump

Pump Model	Product	Pump Model	Product	Pump Model	Product
LR 37970 A	Lube & Scavenge Pump	RG 45190 A	Low Pressure Fuel Ejector	LR 47140	Lube & Scavenge Pump
LR 37970 B	Lube & Scavenge Pump	RG 45190	Low Pressure Fuel Ejector	LR 47180	Pump prop feathering
LR 37980 A	Lube & Scavenge Pump	RG 45290	Jet Pump	LR 47190	Lube & Scavenge Pump
LR 37990 A	Lube & Scavenge Pump	LR 45300 A	Jet Pump	LR 47230	Lube & Scavenge Pump
LR 37990 B	Lube & Scavenge Pump	RG 45300	Jet Pump	LR 47260 A	Lube & Scavenge Pump
LR 37990 C	Lube & Scavenge Pump	LR 45310 A	Jet Pump	LR 47260 B	Lube & Scavenge Pump
RG 38020 A	Scavenge Pump	RG 45310	Jet Pump	LR 47260	Lube & Scavenge Pump
RG 38020 D	Scavenge Pump	RG 45390 A	Jet Pump	LR 47265	Lube & Scavenge Pump
RG 38020	Scavenge Pump	RG 45390 B	Fuel Pump	LR 47270	Lube & Scavenge Pump
RR 38530 D	Lube & Scavenge Pump	RG 45390	Fuel Pump	LR 47330	Lube & Scavenge Pump
RR 38530 E	Lube & Scavenge Pump	LR 45400 A	Jet Pump	LR 47340	Lube & Scavenge Pump
RR 38530 F	Lube & Scavenge Pump	RG 45400	Jet Pump	LR 47360 A	Lube & Scavenge Pump
RR 38530 G	Lube & Scavenge Pump	RG 45720	Jet Pump	LR 47360 B	Lube & Scavenge Pump
RR 38530 K	Lube & Scavenge Pump	RG 45800	Jet Pump	LR 47360	Lube & Scavenge Pump
RR 38630 A	Lube & Scavenge Pump	RG 45810	Jet Pump	LR 47370	Lube & Scavenge Pump
RR 38630 C	Lube & Scavenge Pump	RG 45880	Jet Pump	LR 47380 A	Lube & Scavenge Pump
RR 38730 A	Lube Pump	RG 45890	Jet Pump	LR 47380 B	Lube & Scavenge Pump
RR 38730 B	Lube Pump	LR 45900 A	Jet Pump	LR 47380 C	Lube & Scavenge Pump
RR 38740 A	Lube Pump	LR 45900	Jet Pump	LR 47380	Lube & Scavenge Pump
LR 38840	Lube & Scavenge Pump	LR 45920 -1E	Jet Pump	LR 47390	Lube & Scavenge Pump
LR 38850 A	Scavenge Pump	LR 45920	Jet Pump	RR 52000 B	Fuel Boost Pump
LR 38850	Scavenge Pump	RG 46020	Pump vaccuum	RR 52000 C	Fuel Boost Pump
RG 45010 A	Transfer Ejector Pump	LR 47000 A	Lube & Scavenge Pump	RR 52000 D	Fuel Boost Pump
RR 52000 E	Fuel Boost Pump	LR 54170 C2	Fuel Transfer Pump	RR 54930 G	Fuel Boost Pump
RR 52000 H	Fuel Boost Pump	LR 54170 D	Fuel Transfer Pump	RR 54930 H	Fuel Boost Pump
RR 52000	Fuel Boost Pump	LR 54170 E	Fuel Transfer Pump	RR 54930 J	Fuel Boost Pump
RR 52020	Centrifugal Cooling	LR 54170 F	Fuel Transfer Pump	RG 55000	Fuel Transfer Pump
RR 52270	Fuel Boost Pump	LR 54170 G	Fuel Transfer Pump	RR 55150 A	Fuel Pump
RR 52330	Fuel Boost Pump	RR 54170	Fuel Transfer Pump	RR 55150	Fuel Pump
RG 52400 B	Fuel Boost Pump	RR 54220 B	Fuel Transfer Pump	RR 55300	Fuel Transfer Pump
RG 52400 D	Fuel Boost Pump	RR 54220	Fuel Dump Pump	RR 55370	Fuel Boost Pump
RR 52780 A	Fuel Boost Pump	RR 54260	Fuel Boost Pump	RR 55395	Receiver assy
RR 53060 A	Fuel Boost Pump	RR 54390 A	Fuel Boost Pump	LR 55396 A	Receiver assy
RR 53150 F	Fuel Boost Pump	LR 54390 D	Fuel Boost Pump	LR 55460 A	Fuel Boost Pump
RR 53160 A	Centrifugal Fuel Boost Pump	LR 54390 E	Fuel Boost Pump	LR 55460	Fuel Boost Pump

Pump Model	Product	Pump Model	Product	Pump Model	Product
RR 53160 C	Centrifugal Fuel Boost Pump	RR 54390	Fuel Boost Pump	LR 55510 A	Fuel Pump
RR 53160	Centrifugal Fuel Boost Pump	RR 54520 A	Fuel Boost Pump	LR 55560	Fuel Boost Pump
RG 53175 -2	Receiver assy	RR 54520 C	Fuel Boost Pump	LR 55565	Receiver assy
RG 53175 -1	Receiver assy	RR 54520	Fuel Boost Pump	LR 55570	Fuel Pump
RG 53175	Receiver assy	RR 54605	Fuel Pump	LR 55580	Fuel Pump
RR 53185 C	Fuel Pump	RR 54610 B	Fuel Boost Pump	LR 57410 A	Pump controller
RR 53185	Fuel Pump	RR 54610	Fuel Boost Pump		
RR 53380 A	Fuel Boost Pump	RR 54615 A	Fuel Pump		
RR 53380 B	Fuel Boost Pump	RR 54615	Fuel Pump		
RR 53710 A	Fuel Pump	RR 54630 A	Fuel Boost Pump		
RR 53710 B	Fuel Pump	RR 54630 B	Fuel Boost Pump		
RR 53710 D	Fuel Pump	RR 54660 B	Fuel Boost Pump		
RR 53710 F	Fuel Pump	RR 54660 D	Fuel Boost Pump		
RR 53710 H	Fuel Pump	RR 54660 E	Fuel Boost Pump		
RR 53710 J	Fuel Pump	RR 54860 A	Fuel Boost Pump		
RR 53710 K	Fuel Pump	RR 54860 B	Fuel Boost Pump		
RR 53710	Fuel Pump	RR 54860 C	Fuel Boost Pump		
RR 54080 A	Fuel Boost Pump	RR 54860	Fuel Boost Pump		
RR 54170 A	Fuel Transfer Pump	RR 54930 D	Fuel Boost Pump		
RR 54170 C	Fuel Transfer Pump	RR 54930 E	Fuel Boost Pump		
RR 54170 C1	Fuel Transfer Pump	RR 54930 F	Fuel Boost Pump		